

AccuView[®] Cam

Operator's Manual



CMW[®]

Issue 1.0

053-2737

ORIGINAL INSTRUCTION


Overview

Chapter Contents

Serial Number Location	2
System Components	2
Intended Use	3
FCC Statement	4
About This Manual	4
• Bulleted Lists4
• Numbered Lists4

Serial Number Location

Record serial numbers and date of purchase in spaces provided. Unit serial number is located as shown.

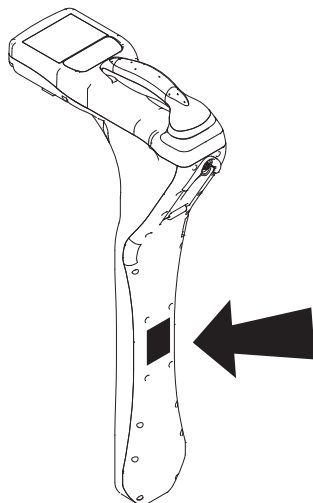

e18om057h.eps

Item	
date of purchase:	
receiver serial number:	

Receiver Description

Model Description	Standard Features
Receiver	AccuView Cam receiver with 8 frequencies: 512B Hz (beacon), 640 Hz (beacon), 8.19 kHz (beacon), 50 Hz, 60 Hz, 150 Hz, 180 Hz, 32.8 kHz. (line, beacon)


Accessory Ports

Receiver (RX)

Mini-USB Port:

This port is intended to be used for connecting to a PC to update software and change the user configuration of the receiver using the PC software. .

NOTICE: Always replace sealed cover over USB connector after use.

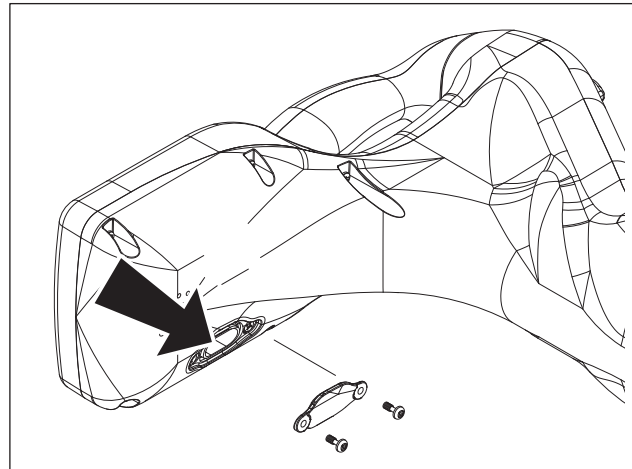

e18om061h.eps

Intended Use

The receiver is designed to locate buried pipes, cables and camera beacons. Eight frequencies and four modes of operation are available to suit your specific locating needs.

The system is designed for operation in temperatures typically experienced in earth moving and construction work environments. Use in any other way is considered contrary to the intended use. The system should be operated only by persons familiar with its particular characteristics and acquainted with the relevant safety procedures, otherwise the protection provided by the equipment in this system may be impaired. The system should be serviced only by authorized repair centers.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by **The Charles Machine Works, Inc.** could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

About This Manual

This manual contains information for the proper use of this equipment. Cross references such as "See page 50" will direct you to detailed procedures.

Bulleted Lists

Bulleted lists provide helpful or important information or contain procedures that do not have to be performed in a specific order.

Numbered Lists

Numbered lists contain illustration callouts or list steps that must be performed in order.

Foreword

This manual is an important part of your equipment. It provides safety information and operation instructions to help you use and maintain your Subsite[®] equipment.

Read this manual before using your equipment. Keep it with the equipment at all times for future reference. If you sell your equipment, be sure to give this manual to the new owner.

If you need a replacement copy, contact your Subsite dealer. If you need assistance in locating a dealer, visit our website at **www.subsite.com** or write to the following address:

The Charles Machine Works, Inc.
Attn: Subsite
PO Box 66
Perry, OK 73077-0066
USA

The descriptions and specifications in this manual are subject to change without notice. The Charles Machine Works, Inc. reserves the right to improve equipment. Some product improvements may have taken place after this manual was published. For the latest information on Subsite equipment, see your Subsite dealer.

Thank you for buying and using Subsite equipment.

**AccuView[®] Cam
Operator's Manual**

Issue number 1.0/OM-6/14









Part number 053-2737

Copyright 2014

by The Charles Machine Works, Inc.

Subsite, AccuView, and CMW are registered trademarks of The Charles Machine Works, Inc.

Contents

	Overview machine serial number, information about the type of work this machine is designed to perform, basic machine components, and how to use this manual	1
	Foreword part number, revision level, and publication date of this manual, and factory contact information	5
	Safety machine safety alerts and emergency procedures	9
	Control Icons control menus and display icon descriptions	15
	Locate procedures for locating active, passive and beacon signals	19
	Service service intervals and instructions for this machine	29
	Specifications machine specifications including weights, measurements and power rating	33
	Support the warranty policy for this machine, and procedures for obtaining warranty consideration and training	35

Safety

Chapter Contents

Guidelines	10
Safety Alert Classifications	11
Safety Alerts	12

Guidelines


Follow these guidelines before operating any jobsite equipment:


- Complete proper training and read operator's manual before using equipment.
- Contact your local One-Call (811 in USA) or the One-Call referral number (888-258-0808 in USA and Canada) to have underground utilities located before working. Also contact any utilities that do not participate in the One-Call service. Classify jobsite based on its hazards and use correct tools and machinery, safety equipment, and work methods for jobsite.
- Mark jobsite clearly and keep spectators away.
- Wear personal protective equipment.
- Review jobsite hazards, safety and emergency procedures, and individual responsibilities with all personnel before work begins.
- Replace missing or damaged safety signs.
- Use equipment carefully. Stop operation and investigate anything that does not look or feel right.
- Contact your equipment dealer if you have any question about operation, maintenance, or equipment use.


Safety Alert Classifications

These classifications and the icons defined on the following pages work together to alert you to situations which could be harmful to you, jobsite bystanders or your equipment. When you see these words and icons in the book or on the unit, carefully read and follow all instructions. **YOUR SAFETY IS AT STAKE.**

Watch for the three safety alert levels: **DANGER**, **WARNING** and **CAUTION**. Learn what each level means.

 **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


 **CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Watch for two other words: **NOTICE** and **IMPORTANT**.


NOTICE can keep you from doing something that might damage the unit or someone's property. It can also alert you against unsafe practices.

IMPORTANT can help you do a better job or make your job easier in some way.

Safety Alerts

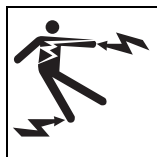


⚠ DANGER Electric shock. Contacting electric lines will cause death or serious injury. Know location of lines and stay away.

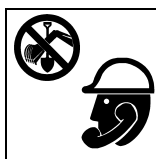

⚠ WARNING Jobsite hazards could cause death or serious injury. Use correct equipment and work methods. Use and maintain proper safety equipment.



⚠ WARNING Explosion possible. Serious injury or equipment damage could occur. Follow directions carefully.

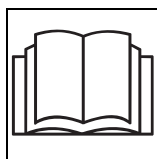

⚠ WARNING Incorrect procedures could result in death, injury, or property damage. Learn to use equipment correctly.



⚠ WARNING Moving traffic - hazardous situation. Death or serious injury could result. Avoid moving vehicles, wear high visibility clothing, post appropriate warning signs.



Safety Alert

Read and follow all safety precautions.

Do not operate equipment unless you have completed proper training and have read the operator's manual.

Check that equipment is in good condition and that test leads are clean and have no cracked insulation.

Jobsite hazards could cause death or serious injury. Use correct equipment and work methods. Use and maintain proper safety equipment.



⚠ WARNING Explosion possible. Do not operate transmitter near explosive devices or blasting operations.



⚠ WARNING Battery cells inside may vent or rupture. Do not crush, do not heat or incinerate, do not short circuit, do not dismantle, do not immerse in any liquid. Observe charging instructions.


Control Icons

Chapter Contents

Receiver	16
• Keypad	16
• Display	17
• Menus	18

Receiver



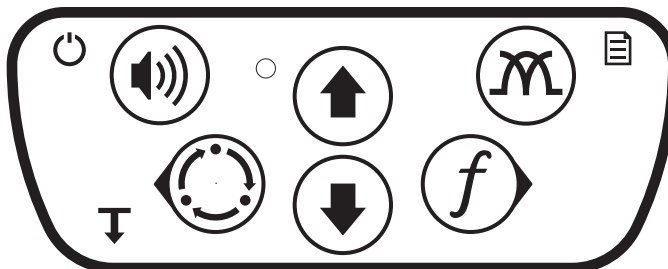






 

Receiver Keypad




e18om045h.eps

Keypad buttons perform several functions depending on operating mode. To activate most functions, press and release the button. For other functions, press and hold the button until the function activates.

Receiver Keypad Icons

 Power ON/OFF (press and hold)	 Up	 Antenna Configuration
 Volume Exit Menu		 Menu (press and hold)
 Location Mode  Back  Depth (press and hold)	 Down	 Frequency  Select / Next



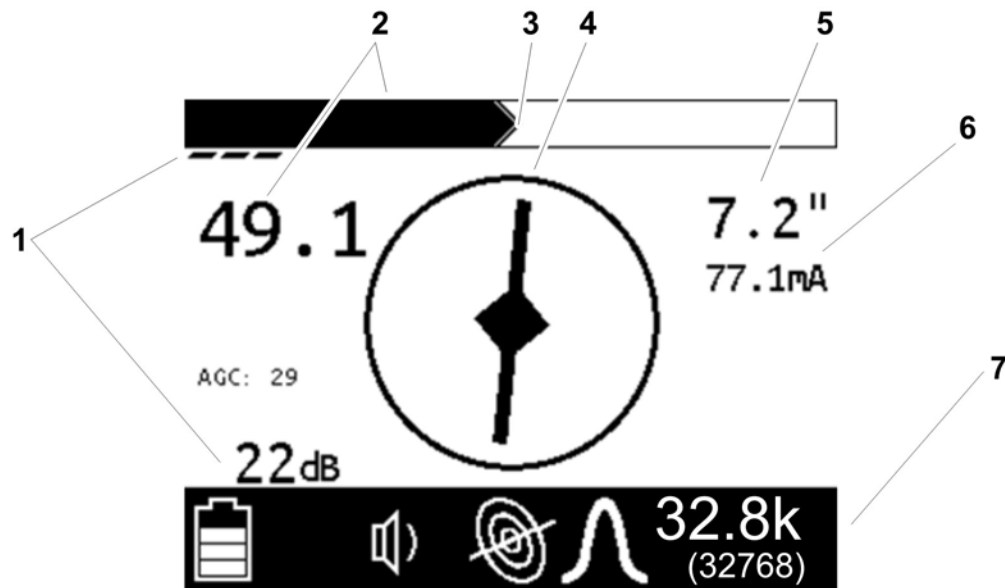






Receiver Display



e18om080h.jpg

- | | |
|--------------------|--------------------------------|
| 1. Gain | 5. Estimated depth |
| 2. Signal strength | 6. Current meter |
| 3. Peak signal | 7. Unit status bar (see below) |
| 4. Compass | |

 









 






Status Bar Icons

 Battery level	 Line mode	 Twin peak antenna
 Volume level	 Power mode	 Total field antenna
 Radio mode	 Beacon mode	 Single peak antenna

Receiver Menus

Menus allow the operator to set user interface preferences. Use the up, down, select/next, and back buttons on the keypad to navigate the menu.

Receiver Menu Icons

 Frequency	Select frequencies to activate.	Icons show which mode is suited for each frequency:  Power  Beacon  Line
 Settings	 Language	Select user interface language
	 Units	Select measurement units for distance and depth
	 Backlight	Select backlight setting
	 Shutdown Timer	Set amount of time before unit shuts off
 Options	 Audio Mode	Select audio mode setting
	 Audio Style	Select audio style setting
	 Gain	Select gain option
	 Autodepth	Select automatic or manual depth
 System Info	 System Info	Displays the receiver model configuration, model number, serial number, software version, hour count, configuration date, and calibration date.
	 Diagnostics	Use to troubleshoot receiver. Contact Product Support.

Locate

Chapter Contents

Prepare 20

- Select Mode 20
- Select Antenna Configuration 20
- Select Locating Frequency 21
- Adjust Receiver Gain 21

Locate Passive Signals 22

- Setup 22
- Technique 22

Locate Beacon Signals 24

- Setup 24
- Technique 24





Common Signal Problems 27



Prepare




Select Mode

AccuView Cam receivers detect active and passive signals. Select the signal best suited for the locating jobsite. Depending on the receiver model, all modes might not be available.

Mode	Description	Notes
Active:	A signal placed on a target line with a transmitter	
 Line	Signal transmitted on a target line	
 Beacon	Signal transmitted from a beacon inside a pipe or conduit	
Passive:	A signal that a utility line picks up from the environment	
 Power	Allows receiver to trace live 60 Hz power cables	IMPORTANT: Current must be flowing through the cable.
 Radio	Allows receiver to trace cables that pick up and radiate very low frequency (VLF) radio waves.	

Select Antenna Configuration

Select the antenna configuration best suited for the locating jobsite.

Antenna	Description	Advantage / Disadvantage
 Single Peak	Uses one horizontal antenna to detect signal. Response is highest at strongest signal.	more range / less precise
 Twin Peak	Uses two horizontal antenna to detect signal. Response is highest at strongest signal.	most precise / less range
 Total Field	Uses a combination of two horizontal and one vertical antenna to locate signal.	easy to use when sweeping and eliminates ghost signals / easily distorted in congested areas

Select Frequency

Use the transmitter and receiver frequency menus to select the frequencies most suited for a particular jobsite. Be aware of these points:

- Lower frequencies travel farther than higher frequencies.
- Higher frequencies couple onto lines more easily.
- Higher frequencies also couple onto lines other than the target line more easily.


Activate Frequencies

To activate frequencies on the receiver:

1. Navigate to **Settings>Frequency** menu.
2. Select the frequencies best suited for the jobsite conditions. When the box is checked, the frequency is enabled and will be present when pushing the **Frequency** button.

Note: Power, line, and beacon icons indicate which mode a frequency is enabled for.

3. While locating, press the **Frequency** button to select the next enabled frequency.

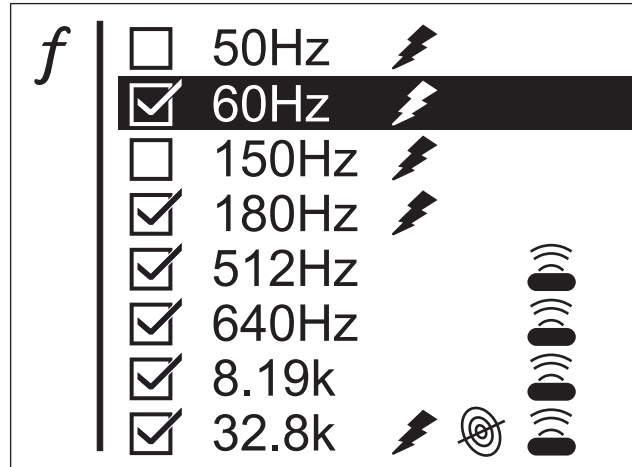

e180m079h.eps



Adjust Receiver Gain

The receiver gain setting controls the sensitivity to the signal.

Action	Result	Effect
increasing gain (pressing up arrow)	more sensitive to signal	allows location farther away from signal source
decreasing gain (pressing down arrow)	less sensitive to signal	stabilizes signal

Locate Passive Signal

Setup

Follow setup procedures for the type of locating you will be doing. Always check receiver battery level at startup.

NOTICE: Cables with no A/C current flowing through them are hard to detect and may be hazardous because they may still have voltage potential. To locate, turn on an appliance to cause current to flow and use active search methods.

Technique

Survey the Site

Make a visual check of the site for signs of buried cables such as:

- recent trenching
- buried cable markers
- overhead lines that run down pole and underground
- gas meters
- valve sights
- drains or manhole covers


Sweep the Site

Search the site by walking a grid pattern while holding receiver close to the ground.

NOTICE: Keep receiver vertical.

Focus the Signal

Move receiver over detected signal to find best signal response. If using a peak antenna mode, rotate receiver until signal is best. Best signal indicates cable direction.

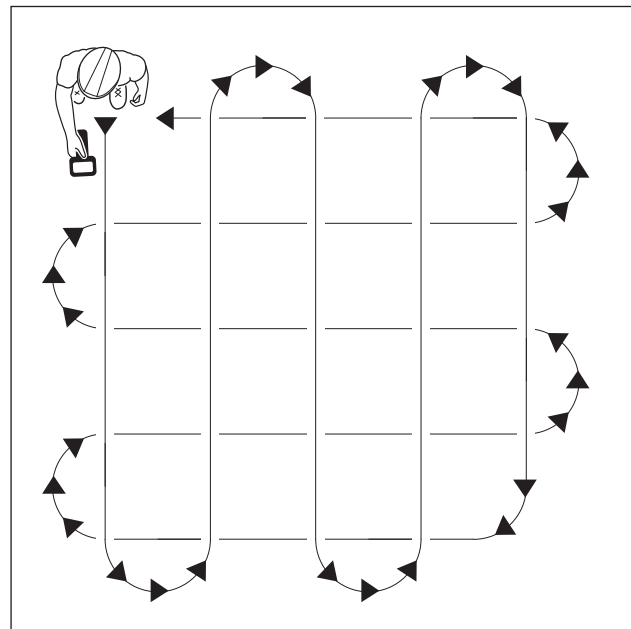


ss1076a-d.eps

Trace the Cable

Walk along the suspected path while moving the receiver from side to side across the area.

IMPORTANT: Keep receiver handle parallel to the suspected cable path.

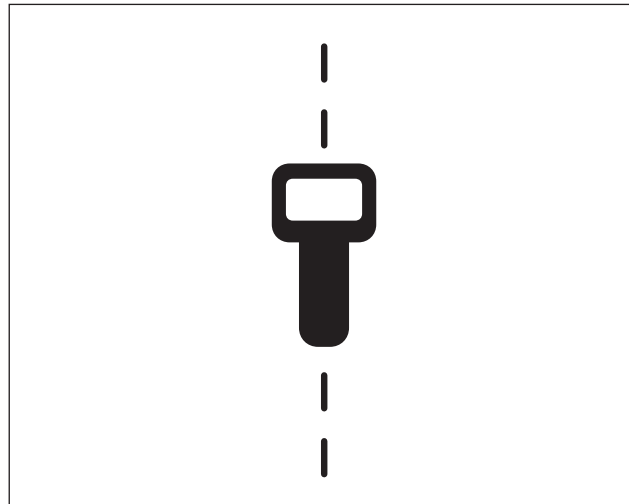

ss1080a-d.eps



Mark the Cable

Sweep, focus, and trace all detected signals in the area. Mark cable paths with colored paint or flags. See the chart below for standard color markings for cable locations.

Utility	Color	Marking Symbol
electric	red	-E-
communications	orange	-TEL- or -TV-

Special Situations

Situation	What to try
Signal is lost.	Walk in a circle to detect a tee or bend in the cable.
Signal varies from low to high and is unstable.	Mark as a hand-dig area.
Receiver does not function properly.	Receiver gain could be set too high or low. Lower or raise gain to locate the cable.

Locate Beacon Signal

Trace metallic pipes or conduits by locating and following a beacon signal.

IMPORTANT: Large metal objects and other signals (such as railroad signals or overhead power lines) will distort signal.


Setup

1. Follow instructions for installing beacon battery.
2. Turn on receiver to ensure that beacon is functioning properly.
3. Attach beacon to plumber's snake or flex rod.

Technique

1. Turn on receiver.
2. Set operating mode to Beacon location.
3. Set antenna configuration to Total Field.
4. Place beacon into the pipe and move it down the pipe.
5. Locate beacon using peak or null point methods. Peak location is the preferred method in most situations. Null point method is effective for locating deep beacons or for verifying the location of a beacon.


Peak Signal Method: When inside peak camera region, rotation arrows will appear.

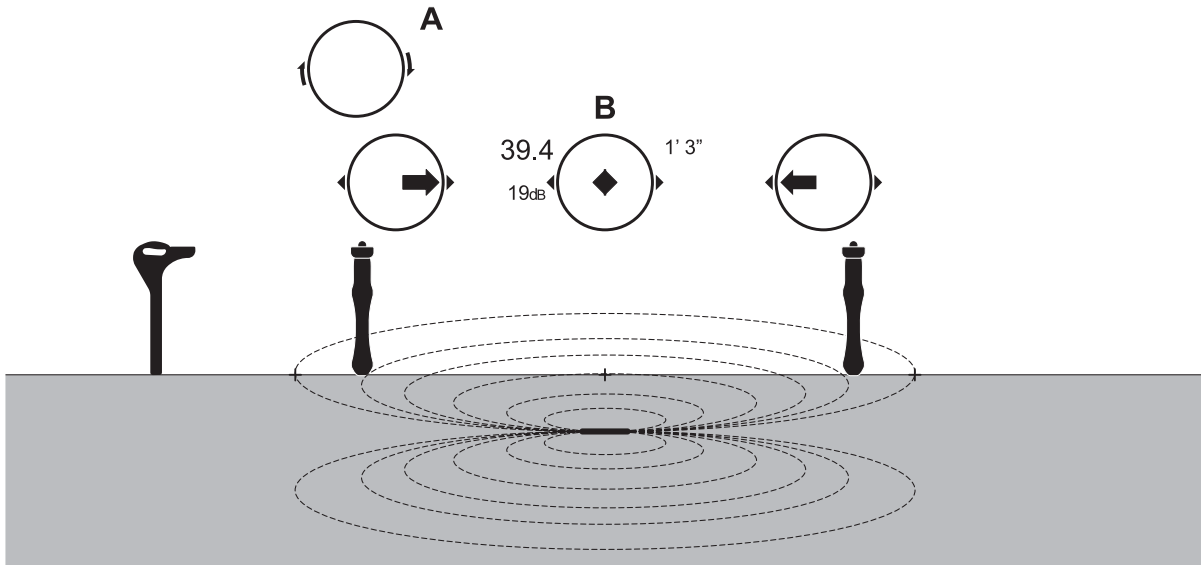

e13om078h.eps


A. Rotation arrows B. Peak location

- First, use signal strength to find the highest signal.
- Using the rotation arrows (2), rotate the receiver handle so that it is perpendicular to the beacon.
- Next, follow left/right arrows (1) to locate the approximate beacon position.

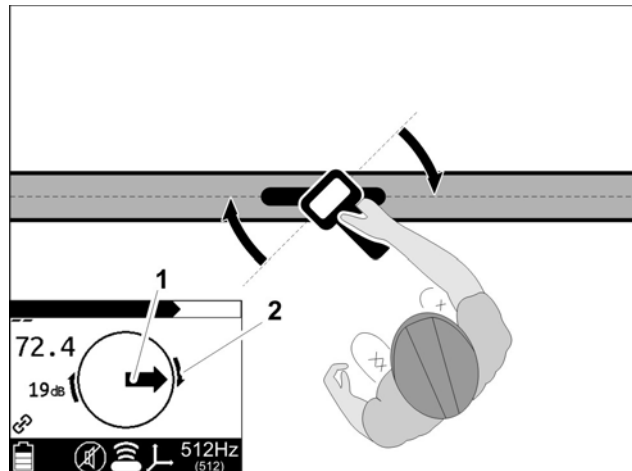


e18om032h.jpg

- Finally, walk forward or backward to identify the location with the strongest signal response as indicated by both the bar graph and corresponding numeric display.
- Camera is successfully located when diamond appears in the center of the display.

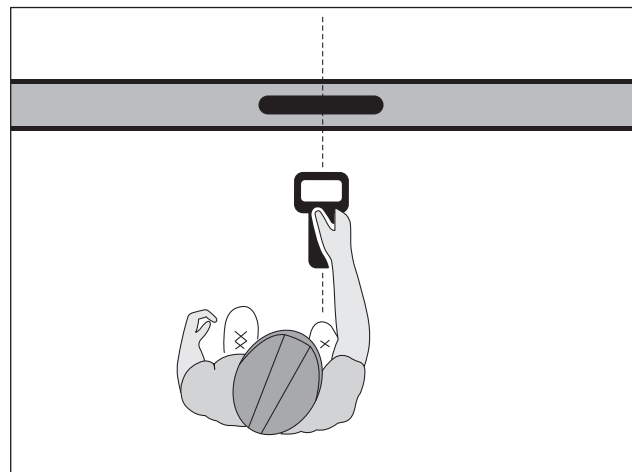

e18om034h.eps

Null Point Method:

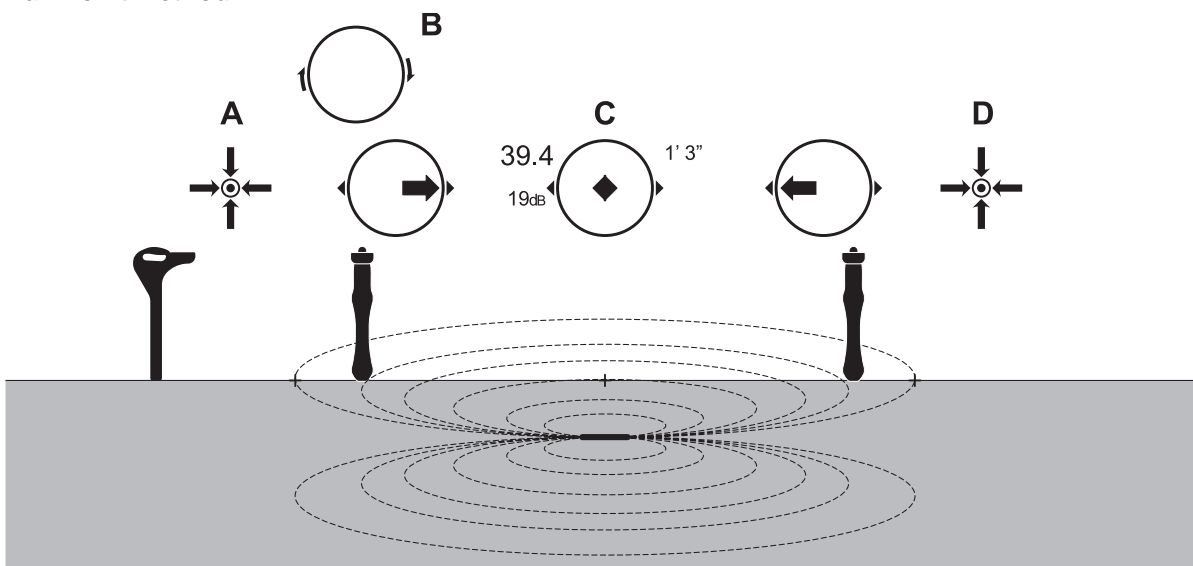

e13om077h.eps


A. Back null point B. Rotation arrows C. Peak location D. Front null point

- Circle over approximate location. Follow directional arrows to locate the null points. The null icon (four arrows pointing in toward a center circle) indicates the null point. Mark both null points.
- Place receiver halfway between null points and rotate receiver as directed by arrows.
- Next, center the receiver on the beacon using the fore/aft arrows.
- Finally, move the receiver perpendicular to the fore/aft arrow axis to find peak signal.


- When the beacon is correctly located, a diamond (1) will form in the center of the compass, the exterior arrows (2) will appear, and the signal (3) will be strongest. The depth reading will display.
- If operating in Manual depth, press the **Depth** key to estimate depth.

NOTICE: When estimating depth with a beacon in nonmetallic pipe, depth shown will be to the center of the beacon, not to the top of the pipe.

- Continue to track the beacon and observe depth readings. Mark pipe location with paint.

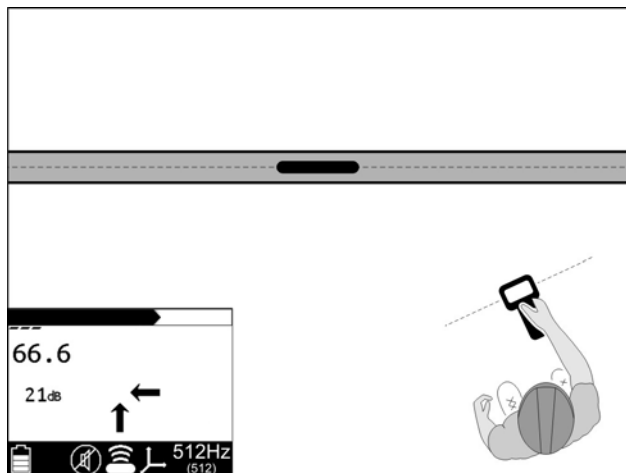

e18om001w.jpg

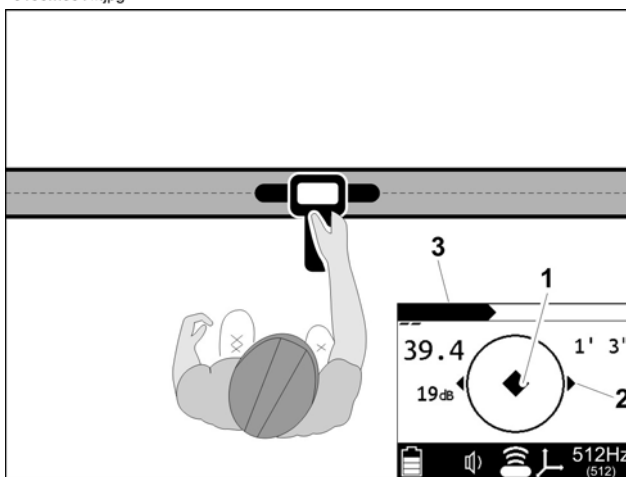

e18om003h.jpg

Common Signal Problems

Distortions in the electromagnetic field around a cable can affect location accuracy. Tees, bends, parallel cables, crossing cables, or large metallic objects can distort signals.

IMPORTANT: If target depth and location are critical, confirm by hand-digging or vacuum excavation.

Learn to recognize the following kinds of distortion:


Shadows

Shadows, also called blind spots, often happen when a metallic object partially obstructs the signal, or a signal from a parallel cable interferes with target signal.



Secondary (Ghost) Signals

A typical beacon signal pattern shows a main signal and two weaker secondary signals. Identify beacon location at the main signal. Familiarity with beacon signal patterns will lessen the effect of ghost signals. Using the Total Field antenna mode will eliminate ghost signals. See "Select Antenna Configuration" on page 20.

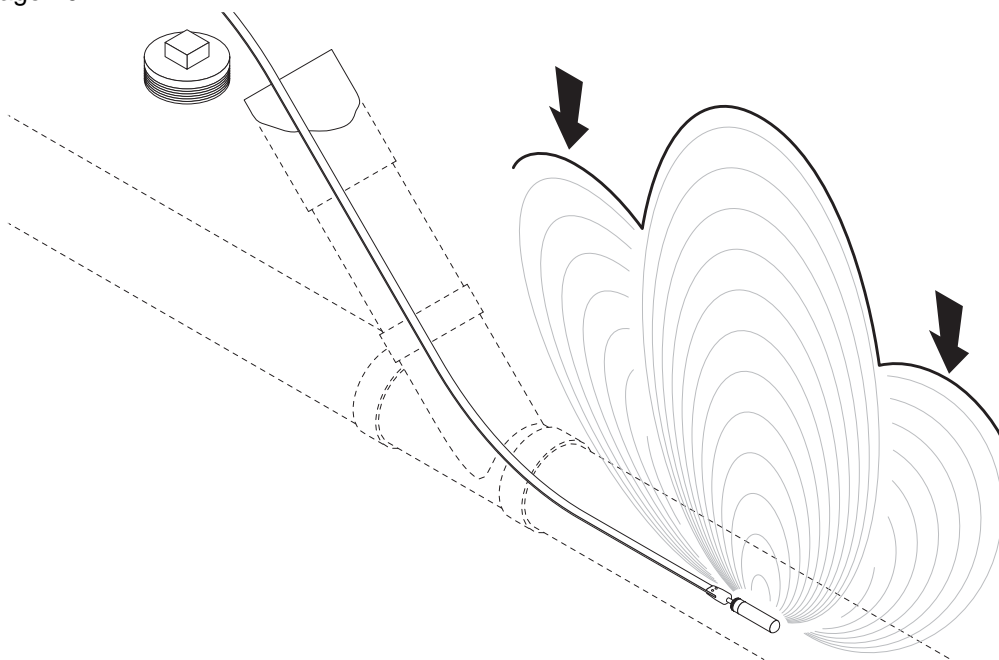

Service

Chapter Contents

General Care	30
As Needed	31

General Care

Under normal operating conditions, receiver and transmitter need only minor maintenance. Following these care instructions can ensure longer equipment life:

- Do not drop the equipment.
- Do not expose the equipment to high heat (such as in the rear window of a vehicle).
- Clean equipment with a damp cloth and mild soap. Never use scouring powder.
- Do not immerse in any liquid.
- Inspect housing daily for cracks or other damage. If housing is damaged, contact your equipment dealer for replacement.
- Do not mix new and used batteries.

As Needed

Location	Task	Notes
Receiver Unit	Change batteries	2 LR20 "D" alkaline
Transmitter Unit	Change batteries	10 LR20 "D" alkaline

Receiver Unit


Change Batteries

Use 2 LR20 (D-cell) alkaline batteries in receiver.

1. Remove battery cover.
2. Insert batteries as shown.
3. Install and tighten battery cover.
4. Check operation.

Storage and Disposal

- Dispose of in accordance with local regulations.
- Store in a cool, dry, and well-ventilated area. Storage limits: -4°F to 140°F (-20°C to 60°C), <80% relative humidity.
- For best results, store battery pack in an environment free from corrosive gas at a temperature less than 70°F (21°C). Extended exposure to temperatures above 113°F (45°C) could degrade battery performance and life.

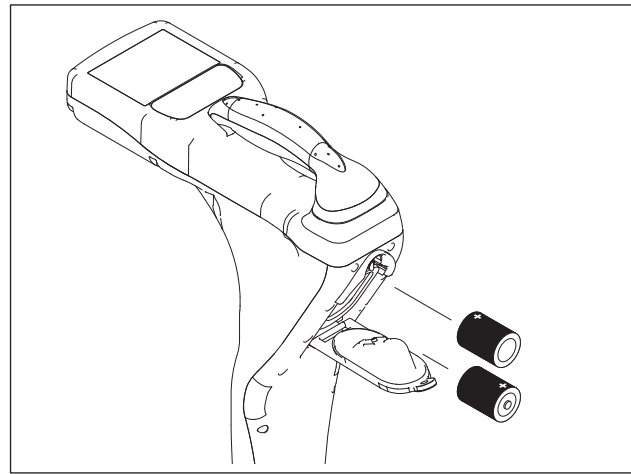

e18om003h.eps


Update Software

The manufacturer updates software periodically to fix bugs and improve functionality. These updates are accessible through web-based software available with this product.

To install updates:

1. Use supplied USB cable to connect the unit to a personal computer.

IMPORTANT: The first time the receiver is connected, the USB drivers will install before trying to connect from the software.

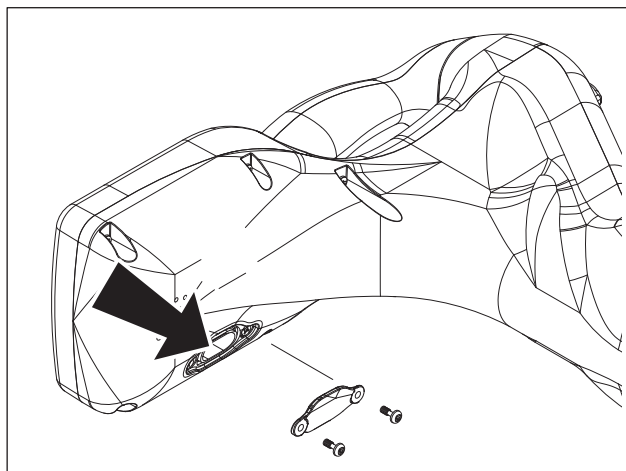


e18om061h.eps

2. Launch the software and follow prompts to install updates.

Refer to the software application for more information.

Specifications

Receiver

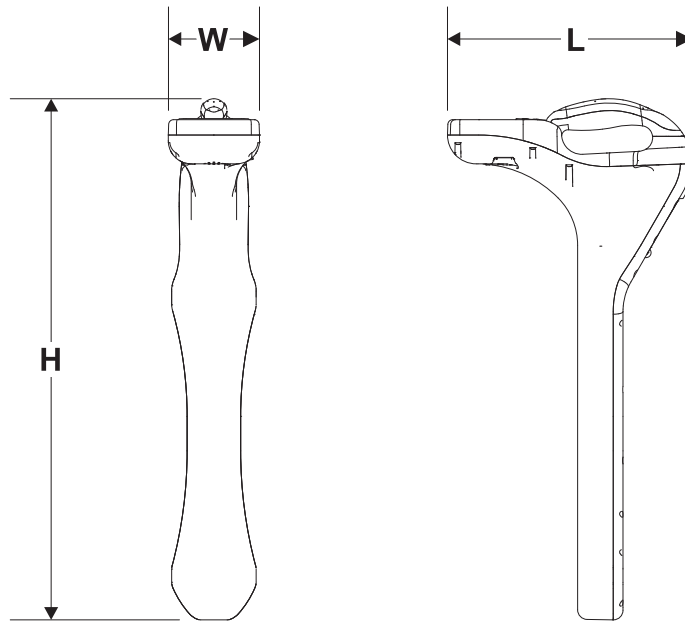

e18om001h.eps

Dimensions		U.S.	Metric
H	Height	27.2"	69.09 cm
L	Length	12.8 "	32.50 cm
W	Width	4.8"	12.19 cm
	Weight	4.8 lb	2.18 kg
Operation		U.S.	Metric
Operating temperature range		-4°F to 122°F	-20°C to 50°C

Antenna configurations: twin peak, left/right (cable only)

Standard Operating Frequencies: 60 Hz, 512 Hz beacon, 640 Hz beacon, 33 kHz beacon, 33 kHz line, 8.19 kHz beacon.

Other: LED LCD backlight; Mini USB External Port; Audio output speaker

Batteries

Type: 2 LR20 (D-cell) alkaline

Life (continuous use at 70°F/21°C): approximately 30 hours; intermittent use, approximately 60 hours

Battery saver: unit shuts off after 5, 10, 20, or 30 minutes of inactivity according to user setting

System Operation

Operating Modes and Frequencies

Active cable: 33 kHz (requires optional transmitter)

Passive cable: 60 Hz, 180 Hz

Beacon (locate/depth only): 512 Hz, 640 Hz, 8.19 kHz, 33 kHz

Locating Ranges	U.S.	Metric
Cables	15'	4.6 m
Beacons	10'	3 m
Depth Estimate Tolerances*	U.S.	Metric
Passive cable $\pm 10\%$	0.5-10'	0.15-3 m
Active cable $\pm 5\%$	0.2-10'	0.2-3 m
Beacon $\pm 5\%$	0.5-10'	0.15-3 m

* Locators are calibrated at factory frequencies to these tolerances under ideal test conditions. Actual operating conditions may have signal distortions or noise sources which result in depth estimate errors.

Support



Procedure

Notify your dealer immediately of any malfunction or failure of Subsite[®] equipment.

Always give model, serial number, and approximate date of your equipment purchase. This information should be recorded and placed on file by the owner at the time of purchase.

Return damaged unit to dealer for inspection and warranty consideration if in warranty time frame.

All repairs must be done by an authorized Subsite repair facility. Repairs done elsewhere will void warranty.

Resources

Publications

Contact your Subsite dealer for publications and videos covering safety, operation, service, and repair of your equipment.

Training

For information about on-site, individualized training, contact your Subsite dealer.

Warranty

Electronics Limited Warranty Policy

Subject to the limitation and exclusions herein, free replacement parts and labor will be provided when a unit fails due to a defect in material or workmanship within one (1) year of first commercial use (See Exceptions below for specific products). Defects shall be determined through inspection by Manufacturer or authorized repair centers. An inspection must occur within thirty (30) days of the date of failure of the product or part by Manufacturer or its authorized repair facility. Manufacturer will provide the location of its inspection facilities or its nearest authorized dealer upon inquiry. Manufacturer reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate. Each warranty repair carries the remainder of the factory warranty or 90 days, whichever is longer, for all repaired components and labor.

Product Warranty Exceptions:

- All Directional Drilling Beacons, Locate Beacons and Accessories carry a six (6) month warranty.
- All Magnetic Locator Products carry an eighty four (84) month warranty.
- All Used (Cosmetic) Electronics products sold from Manufacturer carry a six (6) month warranty from date of sale to dealer.

EXCLUSIONS FROM PRODUCT WARRANTY

- All defects or damages caused by misuse, abuse, improper installation, alteration, neglect, modification, lack of maintenance, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All batteries, which are considered consumable and therefore not covered under this warranty.
- All damaged plastics are considered to be the result of misuse or neglect unless Manufacturer has determined otherwise.
- All repairs or attempted repairs by non-certified repair facilities or personnel will void the warranty.
- All incoming duties and freight charges.

(Exclusions from Product Warranty, continued)



- Manufacturer reserves the right to make changes in design and/or improvements to products from time to time, and user understands that Manufacturer shall have no obligation to upgrade any previously manufactured product to include any such changes.
- In no event shall Manufacturer or its agents, assigns or parent company be liable for any indirect, special, incidental, or consequential damages or for any cover, loss of information, profit, revenue or use based upon any claim by user for breach of warranty, breach of contract, negligence, strict liability or any other legal theory. In no event shall Manufacturer liability exceed the amount user has paid for the Manufacturer product.
- Manufacturer will not be responsible for loss of accessories or loss or erasure of data storage media.
- Should it be determined that applicable law prohibits enforcement of any provision of this Warranty Policy, then to the extent it is necessary to comply with the applicable law, this Warranty Policy shall be deemed amended.
- This Warranty Policy shall be the entire agreement between Manufacturer and the Purchaser. Any statements that purport to be different than or modify or expand the terms set forth in this written policy are not effective for any purpose. ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE ARE EXPRESSLY DISCLAIMED. IN NO EVENT SHALL SUBSITE ELECTRONICS, THE CHARLES MACHINE WORKS, INC., OR ANY AUTHORIZED SERVICING AUTHORITY BE RESPONSIBLE FOR ANY LOSSES, INCLUDING CONSEQUENTIAL AND INCIDENTAL DAMAGES, EXCEPT AS EXPRESSLY PROVIDED HEREIN.

SERVICE AND REPAIR

All units repaired at Manufacturer's location or an authorized service center will carry a 90 day warranty on all replaced components/parts and labor commencing on the date of repair.

EXTENDED WARRANTY

Consult your local Subsite® dealer for extended warranty options.

WARRANTY DETAILS

For information regarding this limited warranty, contact Subsite Product Support Department, P.O. Box 66, Perry, OK 73077-0066, or your local dealer.

March 2013

